

Scenic Cleaning & Maintenance

landscapeforms



Over time, Scenic can be exposed to wind and weather. With regular maintenance, you can ensure it stays in top condition for as long as possible. An annual cleaning using a mild detergent or the Renson® Maintenance Kit will help maintain the color for years. We recommend carrying out maintenance on your installations at least twice a year in coastal or forested regions.

How to Clean

- 01.** Before cleaning, remove any loose dirt with a brush or vacuum cleaner.
- 02.** Clean Scenic using a soft cloth or brush with a mild detergent to remove dirt, dust, grease or moss from the aluminum and from any screen fabrics.

Do not use corrosive or harsh products, scouring pads, or other scouring products. Do not use high-pressure equipment in any case whatsoever.

Other Maintenance Notes

- The mains connection should be made by a qualified electrician in accordance with applicable standards.
- We recommend having a regular technical inspection by your installer biannually in extreme conditions (e.g. coastal areas).
- Part of maintenance includes removing twigs, leaves, bird nests, etc. should they occur.
- Do not use a barbecue or fondue under a closed bladed roof. Make sure that the blades are open so that smoke can escape easily.
- Notes on color variations: minor color variations may occur during the manufacturing process between the color guides and the profiles of the sun protection screen. There may also be minor color differences between components and profiles. Fabric may exhibit slight color nuances and imperfections. A color difference can also occur between screens that are installed at different times.
- When installed in a sand and dust rich environment, the translucency of the fabric may be reduced by the combination of sand and wind.
- If the fabric becomes wet in a sudden storm, you can still roll it up and unroll it later to dry when the weather is better. However, avoid having the wet fabric rolled up for more than three days to prevent formation of mold and spots.
- Fabrics that contain crystal windows can expand, shrink and or show folds or creases caused by differences in temperature or fabric tension.
- Over time, the color of the fabric / crystal window may fade slightly, depending on the chosen color and design.
- In the case of straight screens, where the fabric hangs down vertically because of the weight of the bottom rail or a tensioning system, wrinkles can form in the fabric depending on the type of screen.
- Milk stains or blue lines can appear on crystal windows due to dew or moisture. These are inherent to the product and disappear when the screen is dry.
- Crystal screen may only be cleaned with clean lukewarm water.