

INSTALLATION:

1. Determine placement of unit. Recommended footing size is 200cm (80") wide x 140cm (56") deep x 20cm (8") thick.
2. Mark hole locations.
3. Drill holes according to anchor manufacturer's recommendations.
4. Clear holes of debris using wire brush and compressed air..
5. Slowly set unit in position.
6. Install anchors according to anchor manufacturer's recommendations.

Included components: (8) M12 x 110mm expansion bolts for anchoring

Tools required:

- Crane or forklift to move 4332 lbs (1960 kg).
- Hoisting straps
- Masonry drill and drill bits
- Compressed air and wire brush

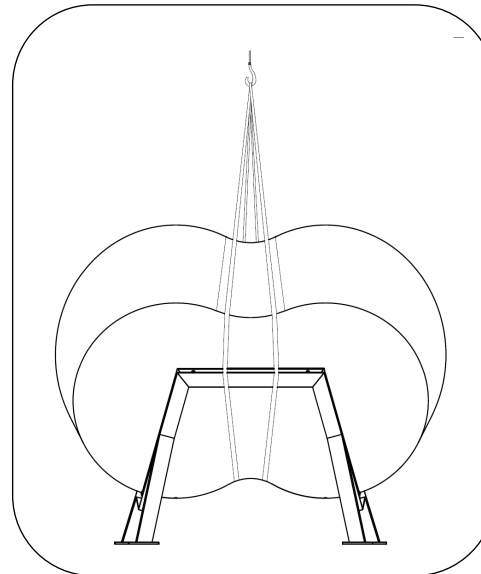


Fig. 1 – Crane install – strap locations

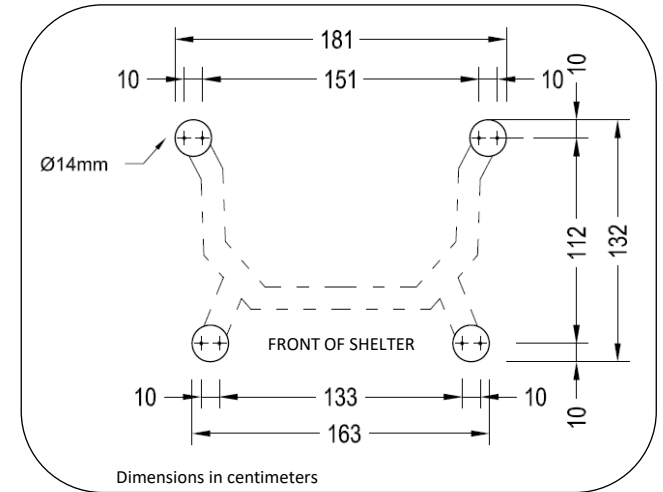


Fig. 2 – shelter hole locations