

Included components:

- (2) 5/8-11 x 4" threaded rods with Loctite for embedded unit

Tools required:

- Surface mount unit ships fully assembled
- Surface mount option: (2) non-corrosive anchor bolts required per unit, maximum size $\varnothing 3/8" \times 2-1/2"$ to 3" length
- Hammer drill with masonry bits
- For embedded mount option: chemical anchoring adhesive (Hilti HIT RE 500 or equivalent)


HANDLE WITH CARE! Flo's finish can be scuffed by contact with tools, concrete, or other abrasive surfaces. Protect the finish from damage during installation. Use touch-up paint to repair any powder coat finish abrasions.

EMBEDDED INSTALLATION:

1. Install thread patch ends of threaded rods into the bike rack legs.
2. Set unit in position and mark hole locations.
3. Move unit and drill 7/8" diameter (minimum) holes 3-1/2" deep.
4. Set unit in position to make sure that Nylon glides make contact with the surface. Threaded rods should not be resting on the bottom of the drilled hole.
5. Move unit. Clear holes of debris.
6. Fill holes with chemical anchoring adhesive.
7. Set unit in position.
8. Wipe away excess adhesive.

SURFACE MOUNT INSTALLATION:

1. Set unit in place and mark holes.
2. Move the unit and drill the holes.
3. Install the anchors and bike rack according to the anchor manufacturer's instructions. Be sure that both anchor plates make solid contact with the surface.

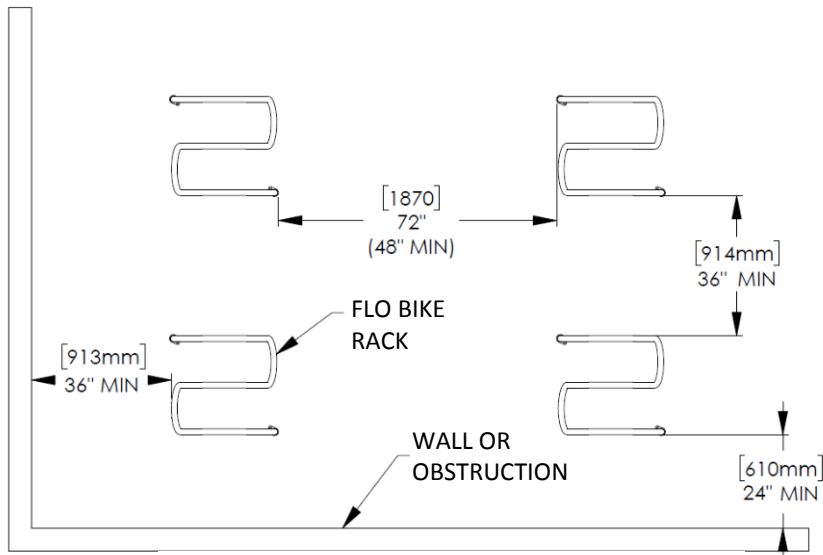

Recommended spacing, according to Association of Pedestrian and Bicycle Professionals (APBP)

