

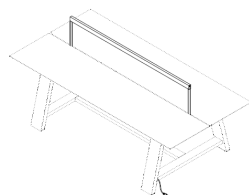
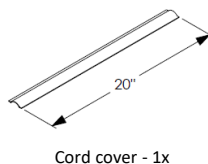


6in luminaire

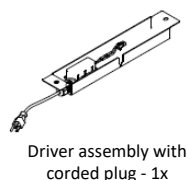

14.25in luminaire

Included components:

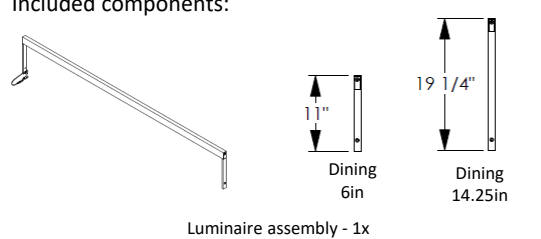

Tools required for assembly

- Safety glasses
- 7/16" socket wrench
- 9/16" socket wrench
- 5/32" hex key
- Protective padding material

WARNING!: LED cartridge and driver are not rated for connection or disconnection while energized. Doing so may damage LEDs and will void the warranty. Disconnect incoming power before making or breaking any electrical connections.

ASSEMBLE WITH CARE! Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.

PROCEDURE FOR ASSEMBLY:

1. Attach luminaire assembly to tabletop frame using hardware shown in Fig. 1. Tabletop slats should be snug against luminaire verticals. If luminaire doesn't fit between tabletop slats, loosen table leg attaching hardware to adjust accordingly.
2. Connect wiring from luminaire to driver wiring.
3. Remove two bolts and washers from table support leg, near the same side as the wire whip extending from the luminaire, see Fig. 2. Retain hardware.
4. Attach box using existing bolts and washers as shown in Fig. 3. Ensure wiring is running through slot on side of box without being pinched.
5. Remove bolt and washer as shown in Fig. 4. Retain hardware.
6. Run cord along table support leg and secure with cord clip using existing bolt and washer, see Fig. 4.
7. Continue running cord down table support leg. Remove backing from glazing adhesive on cord cover and secure cover to table leg, see Fig. 5.
8. Cord must be plugged into a receptacle that meets local codes for existing site conditions (not the responsibility of Landscape Forms).

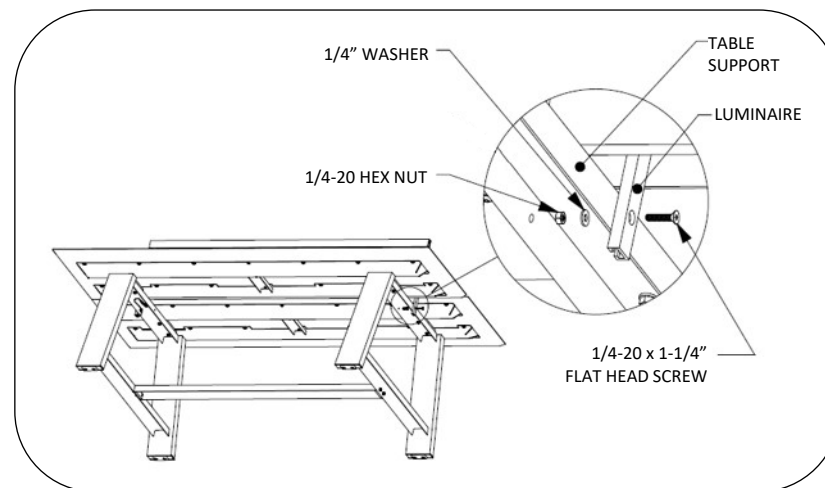


Fig. 1 – attach luminaire to tabletop frame

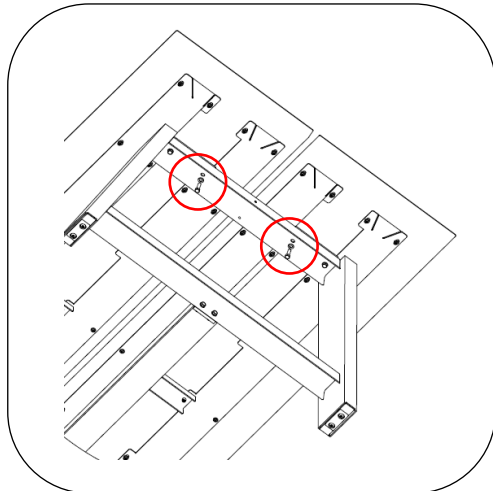


Fig. 2 – remove two bolts and washers

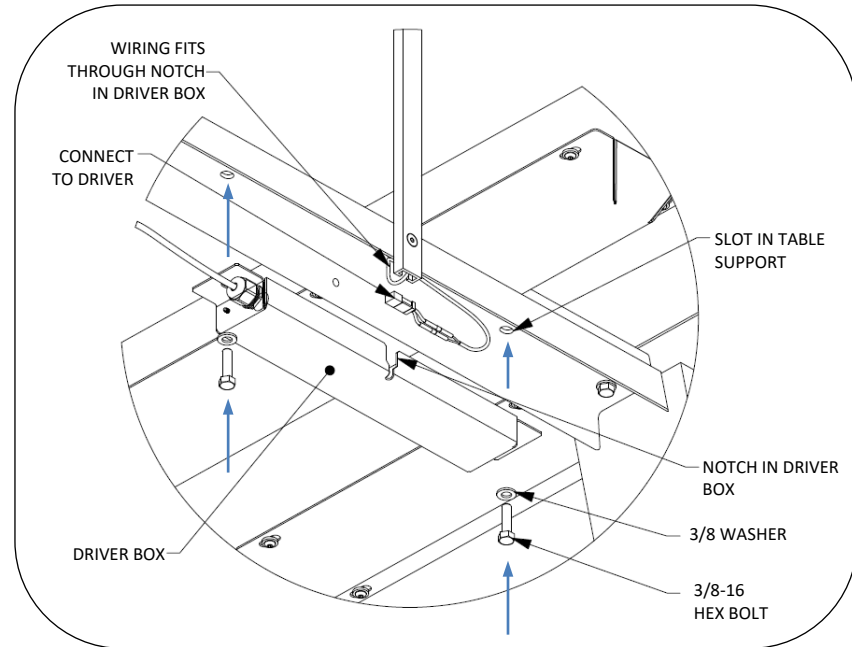


Fig. 3 – attach driver box to support

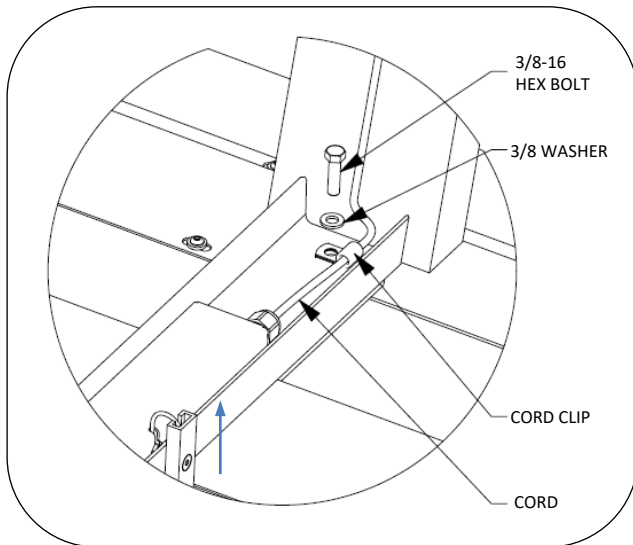


Fig. 4 – attach cord clip

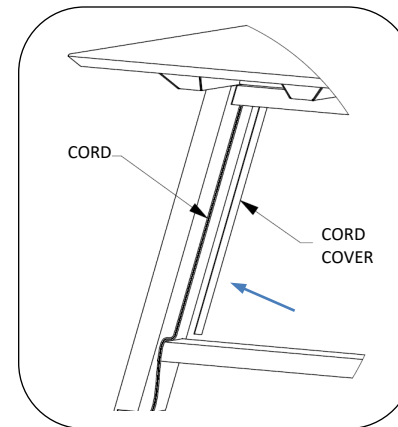


Fig. 5 – attach cord cover