



INSERT INSTALLATION:

NOTE: Do not fully tighten any hardware until the unit is completely assembled. As hardware is installed, tighten just until snug, then loosen ½ turn. Once all hardware is installed, tighten each screw a small amount, in a crisscross pattern, until all screws are equally tight.

Wood and metal inserts ship installed in frame.
Install concrete inserts as shown in Fig. 1. Do not overtighten.

Included components:



Flat head screw



Rubber Washer

Only units with concrete inserts require some assembly. All units with metal or wood inserts ship fully assembled.

For concrete stool inserts: (4) 1/4-20 x 1/2" socket flat head cap screws and (4) 1/4" rubber washers.

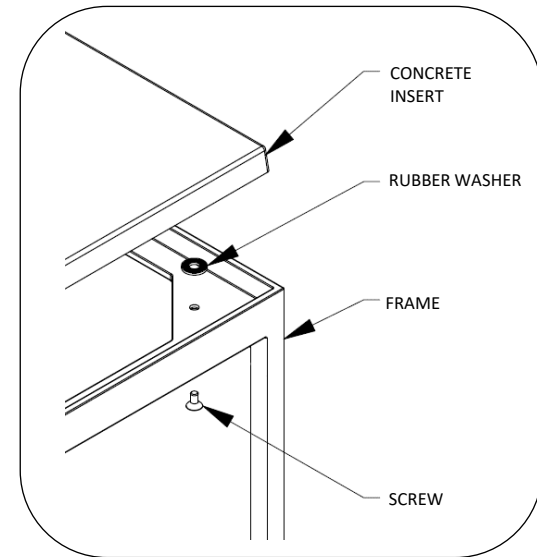


Fig. 1 – Install insert

Tools required:

- Proper safety equipment, if necessary.
- 5/32" hex key for installing inserts

ASSEMBLE WITH CARE! Pangard II® Polyester Powdercoat is a strong, long-lasting finish. To protect this finish during assembly, place unwrapped powdercoated parts on packaging foam or other non-marring surface. Do not place or slide powdercoated parts on concrete or other hard or textured surface – this will damage the finish causing rust to occur. Use touch-up paint on any gouges in the finish caused by assembly tools.