



SICURTA



SILLARGA

Included components:

- (2) M16 x 140mm bolts for anchoring.
- Units can be freestanding or anchored with included hardware.

Tools required:

- Proper equipment to move 529 lbs (Sicurta) or 705 lbs (Sillarga)
- Wood supports or straps if using crane or forklift to move unit
- Wrench, 24mm
- Chemical anchoring adhesive
- Hammer drill with $\varnothing 1\text{-}5/8"$ [40mm] dia masonry drill bit

INSTALLATION:

Determine placement of bench.

For freestanding unit:

1. Set in place with proper equipment such as a forklift or crane. See Fig. 1.

For embedded unit:

1. Mark hole locations.
2. Drill holes according to Fig. 2.
3. Lift unit and install M16 x 140mm bolts. Thread in until tight.
4. Fill holes with chemical anchoring adhesive
5. Lower unit over holes.

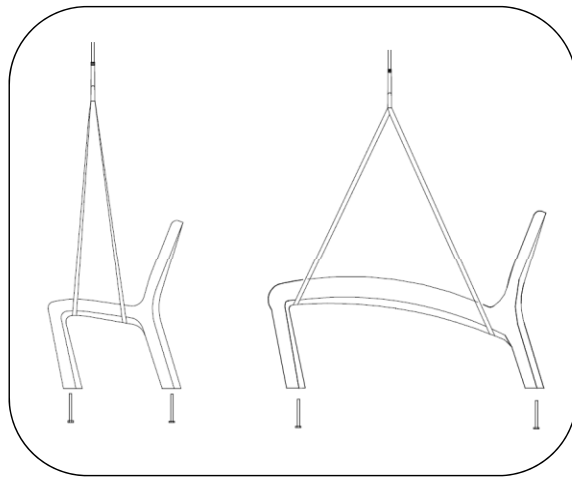


Fig. 1 – Proper lifting procedure

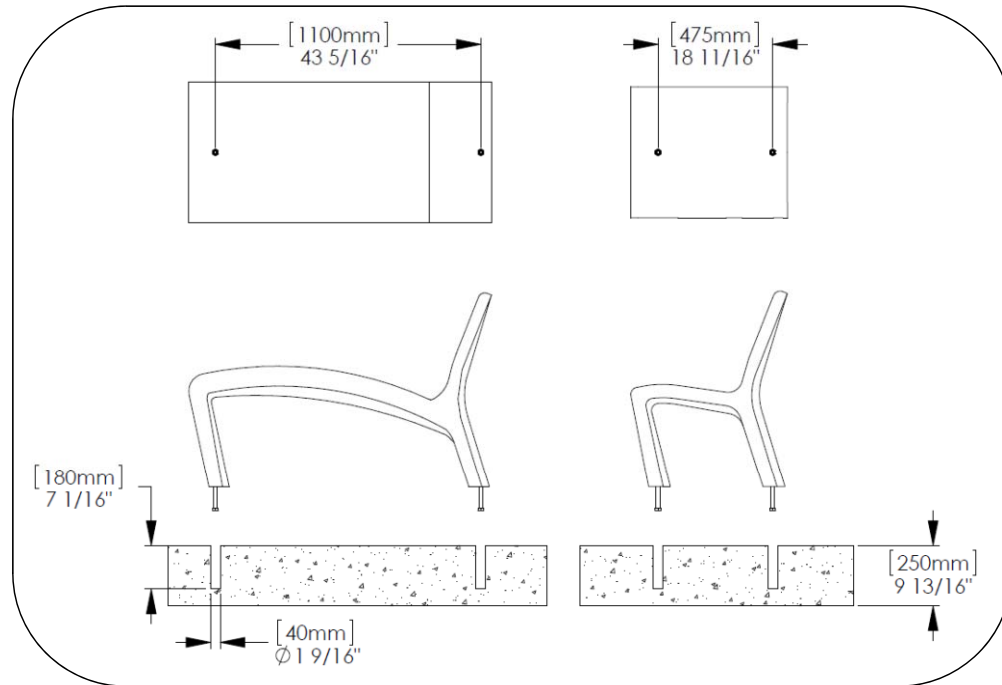


Fig. 2 – Side elevation of footing detail