

# Instructions

Assembly  
Installation  
Operation

7/2007

## Wellspring™ Bench

### Hardware included:

- (4) stainless surface mount tabs
- (5) #12 stainless flat head screws (one extra)


### Tools required for attaching surface mount tabs:

- #2 Phillips screwdriver
- hand drill with 11/64" (4.4 mm) drill bit

### Recommended procedure for attaching surface mount brackets:

Each surface mount bench is shipped with four mounting brackets and screws to attach them to the bench legs. Each bracket has a 3/8" (9.5 mm) diameter hole for a 5/16" (8 mm) anchor.

1. Locate the hardware bag shipped with each bench.
2. Carefully place the bench or table upside down on a smooth nonabrasive surface, and remove the nylon glides from the bottom of the 4 bench legs.
3. Drill an 11/64" pilot hole centered on the bottom of each leg 1" (25 mm) deep.
4. Attach brackets with screws, so that surface mount hardware will be located inward and not create a tripping hazard.

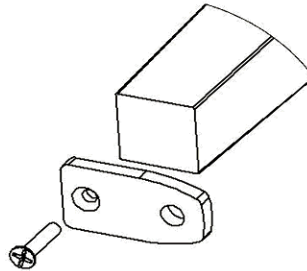

### Recommended procedure for surface mounting:

Although the anchoring procedure and hardware are the responsibility of the installer, we suggest the following:

1. Select corrosion resistant anchors appropriate for the surface. Your hardware store or builders supply may be able to recommend the proper hardware, tools, and safety equipment.
2. Place the bench in the desired position.
3. Mark hole locations for anchors.
4. Move the bench or table to allow access for drilling holes.

Install the anchors and bench according to the anchor manufacturer's instructions.