




24" bench



95" bench

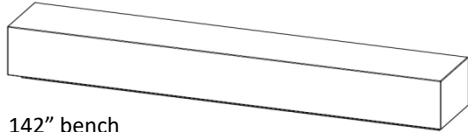

142" bench

Tools required:

- Crane or proper equipment to move bench into position
- Wood supports or straps

INSTALLATION:

Determine placement of bench.

For freestanding bench:

1. Set in place with proper equipment such as a crane. See Fig. 1.

For fixed mounting:

For installations where permanent anchoring is required, construction adhesive for concrete may be used to secure bench to concrete pad. Refer to Fig. 2 for surface area of underside of bench. Adhesive is provided by installer.

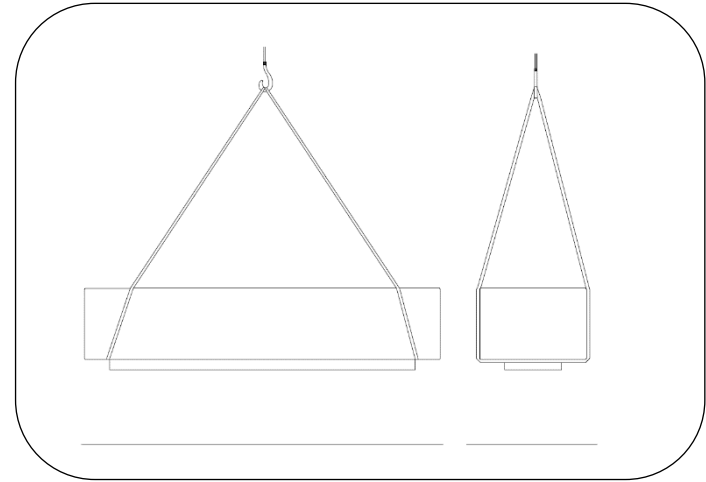


Fig. 1 – Crane install

Socrates	24" Bench	95" Bench	Bench 142"
Weight (lbs)	816	3307	5070
Area of Base (in ²)	143	991	1556
Pressure (lb/in ²)	5.71	3.34	3.26

Fig. 2 – weight and soil bearing